




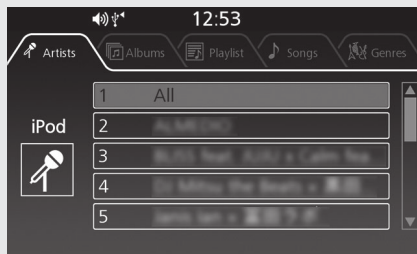
## Audio System (Continued)



### For USB device playback

-  Repeat play mode:
  - When playing from the [Folders] playlist, repeats all tracks in the current folder.
  - When playing from the [Songs] playlist, repeats all tracks in the USB device.
-  Track repeat play mode: Repeats the current track.
-  Random play mode:
  - When playing from the [Folders] playlist, plays tracks randomly from the current folder.
  - When playing from the [Songs] playlist, plays tracks randomly from all tracks in the USB device.

### To Select a Track from the Playlist

You can select a track from various playlists depending on the connected device.




- 1 Press  or **ENT** switch to display the playlist.
- 2 Press  on the 4-way key switch to change the playlist tab.

#### When iPod or Bluetooth® device is connected:

[Artists] → [Albums] → [Playlist] → [Songs] → [Genres]

#### When USB device is connected:

[Folders] → [Songs]

- 3 Select a desired item from the playlist, and then press  or **ENT** switch.

- Available operating functions may differ depending on the connected device and the type of file being played back.
- If an iPhone is connected via Apple CarPlay, the iPod/USB source is unavailable and audio files on the phone can only be played within Apple CarPlay.