

Comfort & Convenience Adjustment *(Continued)*

Adjustable Windscreen

You can adjust your windscreen height higher or lower according to your preference.

If possible, you should adjust your windscreen height to below eye level for better visibility.


■ To Adjust Windscreen Height

Turn the ignition switch to ON. When traveling faster than 3 mph (5 km/h), the windscreen automatically adjusts to the position it was at when the ignition switch was last turned to OFF.


Pushing the windscreen adjusting lever upwards raises the windscreen, and pushing it downwards lowers the windscreen.

The windscreen will be raised or lowered while the adjusting lever is being pressed. When you lower the windscreen, make sure the new position will allow safe operation of the motorcycle.

Windscreen adjusting lever

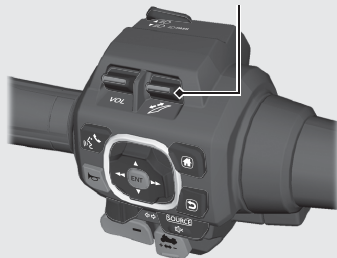

Pushing lever upward
Pushing lever downward

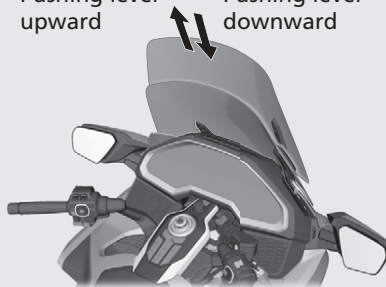

Turning the ignition switch to OFF will automatically lower the windscreen to its original position.

To keep the windscreen raised after turning off the electrical system, such as when washing it, turn the ignition switch to OFF while pushing the windscreen adjusting lever upwards.