


 





- Rotate  or press $\blacktriangle / \blacktriangledown$ on the 4-way key switch until the desired hour is displayed. Move  or press \blacktriangleright on the 4-way key switch to set the hour. The selection move to the minute section.
- Rotate  or press $\blacktriangle / \blacktriangledown$ on the 4-way key switch until the desired minute is displayed. Move  or press \blacktriangleright on the 4-way key switch to set the minute.
- Return to the previous screen or the Home screen.  P.24


Quick setting: Move  /  and hold, or press and hold $\blacktriangle / \blacktriangledown$ on the 4-way key switch until the desired number appears.


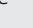
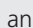
The clock setting is 24-hour indication, but the clock display is 12-hour indication. The call history is 24-hours indication.

The clock will be reset to 12:00 when the battery is reconnected.


Time Zone

Selects the offset of local time from UTC (Coordinated Universal Time). This function is disabled when [Manual setting] is selected. If you are in an area outside the range of the navigation map, [Auto] is disabled. When no GPS Signal such as in tunnel will also disable [Auto].

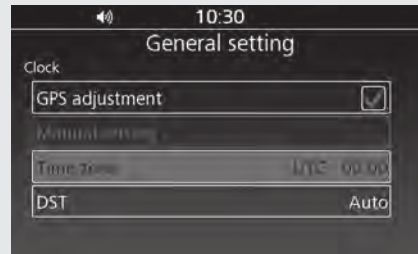


- Select [Time zone], and then press  or **ENT** switch.
- Rotate  or press $\blacktriangle / \blacktriangledown$ on the 4-way key switch to select the time zone, and then press  or **ENT** switch to set your selection.





Setting range: [Auto] or [UTC-12:00] to [UTC +13:00]

- Return to the previous screen or the Home screen.  P.24

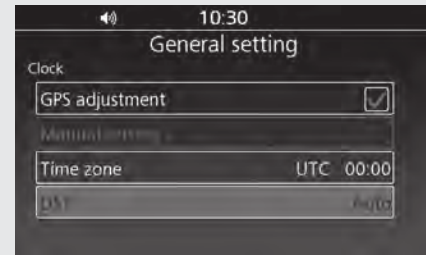DST

Sets the DST (Daylight Saving Time). This function is disabled when [Manual setting] is selected. If you are in an area outside the range of the navigation map, [Auto] is disabled. When no GPS Signal such as in tunnel will also disable [Auto].



- Select [DST], and then press  or **ENT** switch.
- Rotate  or press $\blacktriangle / \blacktriangledown$ on the 4-way key switch to select [Auto], ON (enable) or OFF (disable), and then press  or **ENT** switch to set your selection.
- Return to the previous screen or the Home screen.  P.24