

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” [▶ P. 44](#)

■ Fuse Box Fuses

1. Remove the seat. [▶ P. 52](#)
2. Open the fuse box covers.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box covers.
5. Reinstall the seat.

