



Items		Frequency *1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line			I	I	I	I	I	I		-
	Throttle Operation			I	I	I	I	I	I		74
	Air Cleaner *2					R			R		54
	Crankcase Breather *3			C	C	C	C	C	C		75
	Spark Plug			I	R	I	R	I	R		57
	Valve Clearance			I	I	I	I	I	I		-
	Engine Oil		R	R	R	R	R	R	R	1 Year	60
	Engine Oil Strainer Screen				C		C		C		-
	Engine Oil Centrifugal Filter				C		C		C		-
	Engine Idle Speed		I	I	I	I	I	I	I		-
Evaporative Emission Control System *4					I			I		-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 109).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace