

## Adjusting the Rear Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turning the adjuster position to position B increases spring preload (hard). The standard position is A.

#### NOTICE

Do not turn the adjuster beyond its limits. Adjust both left and right shock absorbers to the same spring preload.

