

# Seat

---

## Rear Seat Stopper Adjustment (SXS1000M5P/M5D/M5L only)

If the rear seat back has excessive vibration in the stored position or if the doors are hard to close, adjust the rear seat stopper.

Rear seat stopper is located below the rear door opener handle.

1. Loosen the bolts.
2. Adjust the rear seat stopper in proper position.
3. Tighten the bolts.

