


# Spark Plugs

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 123.


1. Lift the cargo bed (page 81).
2. Remove the air cleaner outer cover (page 140).
3. Clean any dirt from around the spark plug base.
4. Disconnect the spark plug cap. Take care to avoid damaging the spark plug wire when disconnecting the cap.
5. Using a spark plug wrench provided in the tool kit, remove the spark plug.
6. Inspect the electrode and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
7. Make sure that a 0.04 in (1.0 mm) wire-type feeler gauge cannot be inserted between the spark plug gap. If the gauge fits in the gap, replace the plug with a new one.

### UNDER CARGO BED

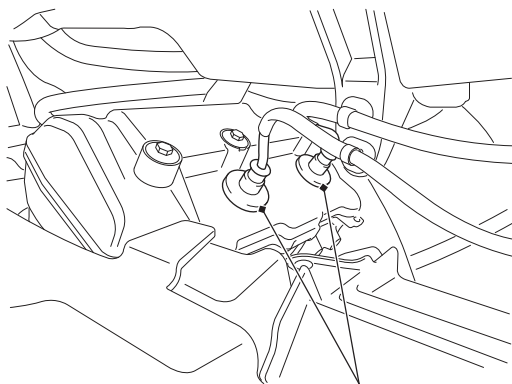

spark plug caps

spark plug gap

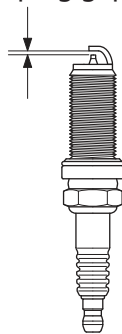

(cont'd)