

If the Transmission Is Not Functioning Properly

When the automatic transmission is not shifting properly, the PGM-FI malfunction indicator lamp (MIL) lights and the gear position indicator will blink.

See your dealer to check and restore the automatic transmission.

If the PGM-FI malfunction indicator lamp (MIL) lights and the gear position indicator blinks while driving, perform the following:

1. Stop the SXS.
2. Turn the ignition switch to the OFF (**w**) position.
3. After the engine stops, turn the ignition switch to the ON (**q**) position.
4. Check the PGM-FI malfunction indicator lamp (MIL) and gear position indicator.

When the PGM-FI malfunction indicator lamp (MIL) and the display on the gear position indicator return to normal:

You may drive the SXS as usual after restarting the engine.

However, we urge you to have your SXS inspected by your dealer.

When the PGM-FI malfunction indicator lamp (MIL) is lit and the gear position indicator is blinking:

Restart the engine; drive the SXS to a location where it can be loaded and transported to your dealer.