

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
NOTE	HOURS	20	100	200				
	DRIVETRAIN BOOTS				I	I	181	
	FRONT and REAR FINAL GEAR OIL (Except TRX420TM1)				(R: EVERY 2 YEARS)	I	131, 134	
	REAR FINAL GEAR OIL (TRX420TM1 only)				(R: EVERY 2 YEARS)	I	131	
*	2WD/4WD SELECT SYSTEM (Except TRX420TM1)					I	—	
*	BRAKE FLUID	NOTE 3			I	I	161	
*	BRAKE SHOES WEAR	NOTE 1, 2				I	169	
*	BRAKE PADS WEAR	NOTE 1, 2				I	164	
*	BRAKE LIGHT SWITCH			I	I	I	170	
	BRAKE SYSTEM			I	I	I	161	
*	REVERSE LOCK SYSTEM			I	I	I	152	
	GUARDS				I	I	179	
*	CLUTCH SYSTEM			I	I	I	151	
*	SUSPENSION				I	I	158	
*	SPARK ARRESTER				C	C	157	
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	172	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.