

Instruments & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	10
Indicators & Displays.....	13
Multi-function Display (TRX420FPM only).....	18
Gear Position Indicator (TRX420FPM only)	19
Oil Change Indicator (TRX420FPM only)	20
Odometer (TRX420FPM only).....	21
Tripmeter (TRX420FPM only).....	21
Hourmeter (TRX420FPM only)	22
Fuel Gauge	23
Controls & Features	24
Fuel Valve	24
Ignition Switch.....	25
2WD/4WD Select Lever (Except TRX420TM)	26
Start Button	27
Engine Stop Switch	27
Headlight Switch.....	28
Headlight Dimmer Switch.....	28
Throttle Lever	29
Reverse Selector Knob.....	30
Front Brake Lever	31
Rear Brake Lever/Parking Brake Lever	31
Rear Brake Pedal.....	31
Parking Brake.....	32
Flag Pole Bracket	33
Trailer Hitch	34
PS (Electric Power Steering) (TRX420FPM only).....	35