

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 213).

Safe Riding Precautions55
Off-road Use Only55
Keep Hands and Feet on Controls.....	.56
Control Speed.....	.57
Use Care on Unfamiliar or Rough Terrain.....	.58
Do Not Perform Stunts.....	.59
Starting & Stopping the Engine60
Preparation60
Starting Procedure61
Flooded Engine62
Bank Angle Sensor Ignition Cut-off System62
Stalled Engine63
How to Stop the Engine64
Shifting Gears65
Riding in Reverse.....	.67

(cont'd)