

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200		
			km	150	1000	2000		
		NOTE	MONTH	HOURS	1	6	12	
				20	100	200		
	DRIVETRAIN BOOTS						162	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TM)				(R: EVERY 2 YEARS)		114, 116	
	REAR FINAL GEAR CASE OIL (TRX420TM only)				(R: EVERY 2 YEARS)		114	
*	2WD/4WD SELECT SYSTEM (Except TRX420TM)						—	
*	BRAKE FLUID	NOTE 3					142	
*	BRAKE SHOES WEAR	NOTE 1,2					150	
*	BRAKE PADS WEAR	NOTE 1,2					145	
*	BRAKELIGHT SWITCH						151	
	BRAKE SYSTEM						142	
*	REVERSE LOCK SYSTEM GUARDS						133	
	CLUTCH SYSTEM						160	
*	SUSPENSION						132	
*	SPARK ARRESTER				C	C	139	
*	NUTS, BOLTS, FASTENERS						—	
**	WHEELS/TIRES						—	
**	TIE-ROD AND JOINT BOOTS						—	
**	STEERING SHAFT HOLDER BEARINGS						—	
**	STEERING SYSTEM						—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 222).

** In the interest of safety, we recommend these items be serviced only by your dealer.