


Air Cleaner

Cleaning

UNDER SEAT

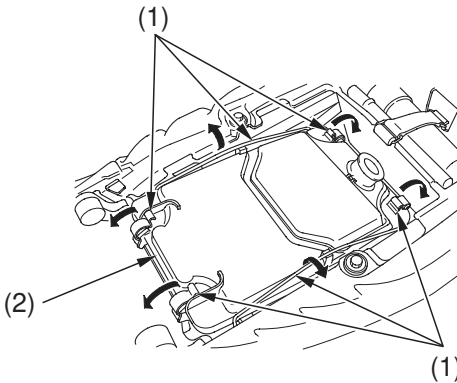

(1) retainer clips

(2) air cleaner housing cover

1. Remove the seat (page 84).
2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).

(cont'd)