


Indicators & Displays

Odometer

The odometer (1) registers total distance traveled in mileage while the ignition switch is ON (I) with the “ODO” mark (2). The odometer locks at 999,999 when the read-out exceeds 999,999.

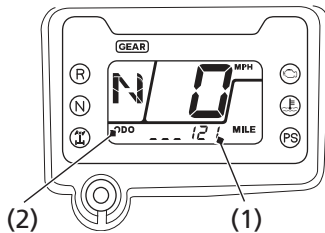


(1) odometer

(2) “ODO” mark

Tripmeter

The tripmeter (1) shows mileage per trip since you last reset the tripmeter while the ignition switch is ON (I) with the “TRIP” mark (2). The tripmeter returns to 0.0 when the read-out exceeds 999.9. To reset the tripmeter to zero, press the mode select button (3) and hold it in for at least 2 seconds in the tripmeter mode.

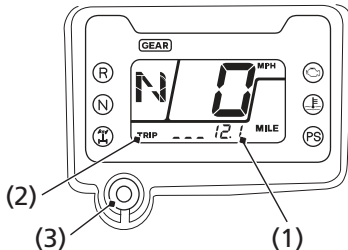

(1) tripmeter

(2) “TRIP” mark

(3) mode select button