

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 249).

Safe Riding Precautions	77
Off-road Use Only.....	77
Keep Hands and Feet on Controls.....	78
Control Speed	79
Use Care on Unfamiliar or Rough Terrain	80
Do Not Perform Stunts.....	81
Starting & Stopping the Engine.....	82
Preparation.....	83
Starting Procedure.....	84
Flooded Engine.....	85
Bank Angle Sensor Ignition Cut-off System.....	85
Stalled Engine.....	86
How to Stop the Engine.....	87
Using the Recoil Starter (Canada only)	88
Shifting Gears.....	89
Riding in Reverse	96

(cont'd)