
## **Battery**

The battery is located in a compartment under the rear fender cover.

## UNDER REAR FENDER COVER

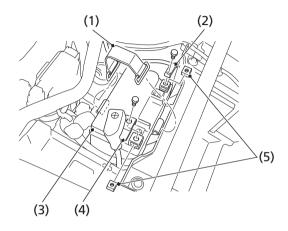

(1) rubber band

- (4) positive (+) terminal lead
- (2) negative (-) terminal lead (5) terminal nuts

## (3) battery

## Removal

- 1. Make sure the ignition switch is OFF (O).
- 2. Remove the seat (page 130).
- 3. Remove the rear fender cover (page 131).
- 4. Release the rings and remove the rubber band (1).
- 5. Disconnect the negative (–) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).
- 6. Remove the battery taking care not to drop the terminal nuts (5).