

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
	MONTH	1	6	12			
	NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS			I	I	189	
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	138, 141	
*	BRAKE FLUID	NOTE 3		I	I	169	
*	BRAKE SHOES WEAR	NOTE 1, 2			I	177	
*	BRAKE PADS WEAR	NOTE 1, 2			I	172	
*	BRAKE LIGHT SWITCH		I	I	I	178	
	BRAKE SYSTEM		I	I	I	169	
*	REVERSE INHIBITOR SYSTEM (For MT models)		I	I	I	160	
	GUARDS			I	I	187	
*	CLUTCH SYSTEM		I	I	I	159	
*	SUSPENSION			I	I	166	
*	SPARK ARRESTER			C	C	165	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	180	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 250).

** In the interest of safety, we recommend these items be serviced only by your dealer.