

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	156	
	AIR CLEANER	NOTE 1			C C	150	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I I	155	
	SPARK PLUG				I I I	160	
*	VALVE CLEARANCE			I	I I	163	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		129	
	ENGINE OIL FILTER					134	
*	ENGINE IDLE SPEED			I	I I	—	
*	EVAPORATIVE EMISSION CONTROL SYSTEM (For AC type)	NOTE 4		I: EVERY 2 YEARS		—	
	RADIATOR COOLANT	NOTE 3			I I	142	
*	COOLING SYSTEM	NOTE 2			I I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 244).