 


## To set the clock:

 
- a Turn the ignition switch to ON.
- b Select the clock.
- c Press and hold the select/reset button until the hour digits start flashing.



- d Press the select/reset button until the desired hour is displayed.



- e Press and hold the select/reset button. The minute digits start flashing.



- f Press the select/reset button until the desired minute is displayed.



- g Press and hold the select/reset button until the display stop flashing. The clock is set.
  - ▶ The time can also be set by turning the ignition switch to OFF.
  - ▶ The display will stop flashing automatically and the adjustment will be cancelled if the button is not pressed for about 30 seconds.