


## Storage Equipment *(Continued)*

### Tool Kit

The tool kit is stored on the face of the ignition switch case behind the ignition switch cover.

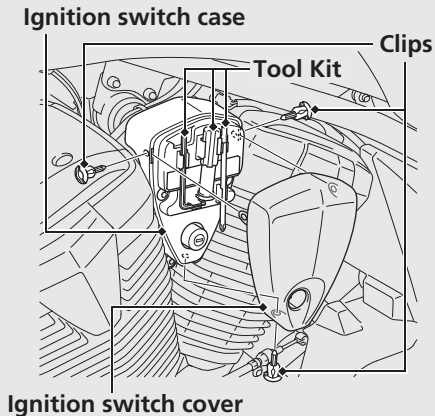

### Removing the Ignition Switch Cover

- a Remove the clips. ( P52)
- b Remove the ignition switch cover.

### Installing the Ignition Switch Cover

Install the parts in the reverse order of removal.