


## Side Covers

The right side cover must be removed for the fuse maintenance, suspension adjustment and to access the owner's manual.

The left side cover must be removed for the main fuse and battery maintenance.

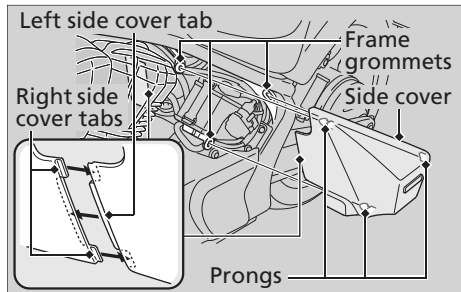

The right and left side covers can be removed in the same way.

### Removal

1. Carefully pull the side cover out until the prongs are clear of the frame grommets.
2. Remove the side cover.

### Installation

1. Align the left side cover tab with the right side cover tabs.
2. Position the side cover so the prongs are aligned with the frame grommets.
3. Push the prongs in.