


- Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.

► Discard the oil and oil filter at an approved recycling center.

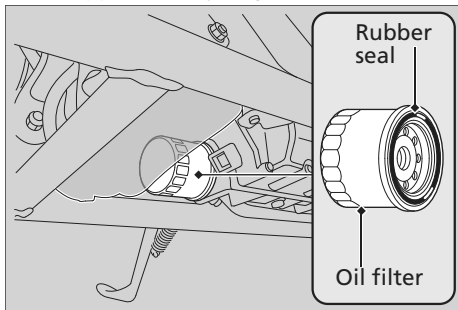

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.
- Install the new oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

- Install a new sealing washers onto the drain bolts. Tighten the drain bolts.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m).

- Fill the crankcase with the recommended oil (► P. 43) and install the oil fill cap/dipstick.

#### Required oil

#### When changing oil & engine oil filter:

3.9 US qt (3.7 liters)

#### When changing oil only:

3.7 US qt (3.5 liters)

- Check the oil level. ► P. 58
- Check that there are no oil leaks.