


## If a Fuse Blows

---

### *Main Fuse Access:*

2. To access the main fuse, remove the right side cover (page 76 ).
3. Pull out the starter magnetic switch ( 1 ) and disconnect the wire connector ( 2 ) of the starter magnetic switch.
4. Pull the main fuse ( 3 ) out. If it is blown ( 5 ) (page 176 ), install the spare main fuse ( 4 ).
5. Reconnect the wire connector and install the starter magnetic switch.
6. Install the right side cover.

### RIGHT SIDE

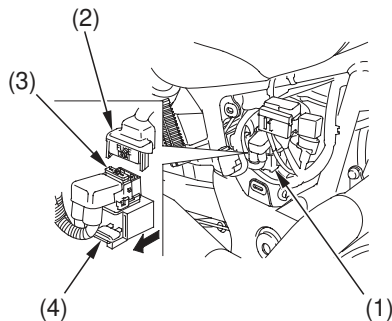

- (1) starter magnetic switch
- (2) wire connector
- (3) main fuse
- (4) spare main fuse