



## Headlight Bulb

1. Remove the mounting bolts (1) and the headlight case (2).
2. Disconnect the connector (3).
3. Remove the seat rubber (4).
4. Remove the headlight bulb (5) while pressing down on the pin (6).

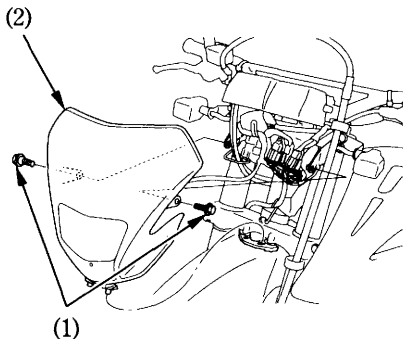

- (1) Mounting bolts  
(2) Headlight case

5. Install a new bulb in the reverse order of removal.
  - Install the seat rubber with its “TOP” mark (7) facing up.

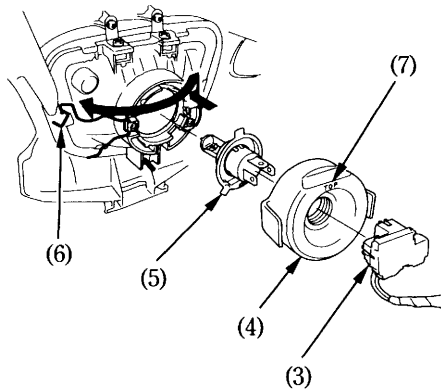

- (3) Connector  
(4) Seat rubber  
(5) Headlight bulb

- (6) Pin  
(7) “TOP” mark