

- Remove the two front cushion setting bolts at the front fork bottom bridge and remove the front cushions ①. (Fig. 4.29)

**CAUTION:**

Before removing the front cushions, mark the front fork pipe.

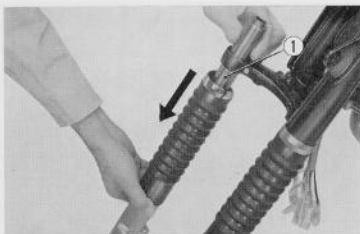


Fig. 4.29 Removing front fork assembly  
① Front fork

- Drain the oil in the cylinder by removing the drain plug before disassembly of the lower cylinder.
- Disassemble the fork assembly by removing the lower cover seat packing, lower cover seat, boot, coil spring and spring guide.
- Use a snap ring pliers to remove the 37 mm internal circlip. Separate the fork piston and stop ring from the fork bottom pipe.

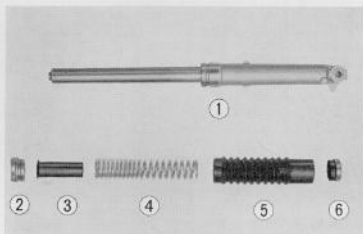


Fig. 4.30 Component parts of front fork

- Front fork complete
- Fork cover lower seat
- Front cushion spring guide
- Front cushion spring
- Front fork boot
- Front cushion under spring seat

**(CD 90 & CT 90)**

- Remove the handle and the fork top bridge in accordance with section 4.1.B.
- Remove the headlight case ① by removing the two 6×25 hex bolts ② within the headlight case and the 6×40 cross screw. (Fig. 4.31)

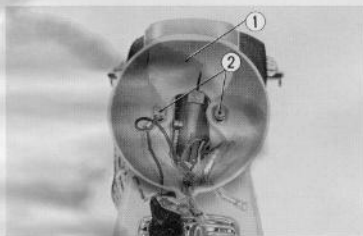


Fig. 4.31 Removing headlight case

- Headlight case
- 6×22 hex bolt