

## MODEL C 90



Fig. 5.43 Torquing points on left side



Fig. 5.44 Torquing points on right side

- |  |   |
|--|---|
| ① Handle installation nuts<br>(90~110 kg·cm : 6.5~7.95 lbs·ft)   | ⑦ Rear cushion upper and lower nuts<br>250~300 kg·cm : 18~21.7 lbs·ft)          |
| ② Steering stem nut<br>(800 kg·cm : 68 lbs·ft)                   | ⑧ Rear wheel spokes<br>8~25 kg·cm : 0.58~1.8 lbs·ft)                            |
| ③ Front and rear axle nuts<br>(300~400 kg·cm : 21.7~25.3 lbs·ft) | ⑨ Front brake panel stopper and torque bolt<br>(200~250 kg·cm : 14.5~18 lbs·ft) |
| ④ 8×46 hex bolt nuts<br>(300~400 kg·cm : 21.7~25.3 lbs·ft)       | ⑩ Engine hanger nuts<br>(200~250 kg·cm : 14.5~18 lbs·ft)                        |
| ⑤ Front arm pivot nuts<br>(300~400 kg·cm : 21.7~25.3 lbs·ft)     | ⑪ Rear fork pivot nut<br>(200~250 kg·cm : 14.5~18 lbs·ft)                       |
| ⑥ Front wheel spokes<br>(4~21 kg·cm : 0.3~1.5 lbs·ft)            | ⑫ Rear brake torque link nut<br>(100~200 kg·cm : 7.2~14.5 lbs·ft)               |