

NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-13).
Check that all safety clips, hose clamps and cable stays are in place and properly secured.



WHEELS/TIRES

NOTE:

Tire pressure should be checked when the tires are COLD.

RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		FRONT	REAR
Tire pressure kPa (kgf/cm ² , psi)		290 (2.90, 42)	290 (2.90, 42)
Tire size		120/70 ZR17 (58W)	180/55 ZR17 (73W)
Tire brand	Bridgestone	BT57F RADIAL G	BT57R RADIAL G
	Dunlop	D205F J	D205 G
	Michelin	MACADAM 90XS	MACADAM 90XS



Check the tires for cuts, embedded nails, or other damage.
Check the front and rear wheels for trueness (refer to section 13 and 14).

Measure the tread depth at the center of the tires.
Replace the tires when the tread depth reaches the following limits.

MINIMUM TREAD DEPTH:
FRONT: 1.5 mm (0.06 in)
REAR: 2.0 mm (0.08 in)

STEERING HEAD BEARINGS

NOTE:

Check that the control cables do not interfere with handlebar rotation.

Support the motorcycle securely and raise the front wheel off the ground.
Check that the handlebar moves freely from side to side.
If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (Section 13).

