


OIL STRAINER/PRESSURE RELIEF VALVE


REMOVAL

Drain the engine oil (page 3-16).
Remove the exhaust pipe (page 2-21).

Remove the oil pan flange bolts.
Disconnect the oil return pipe from the lower crankcase and remove the oil pan.

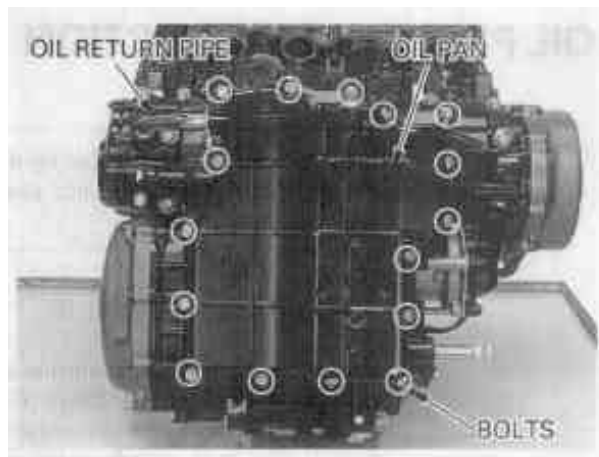

Remove the bolt and oil return pipe bracket.
Remove the oil return pipe and O-rings.

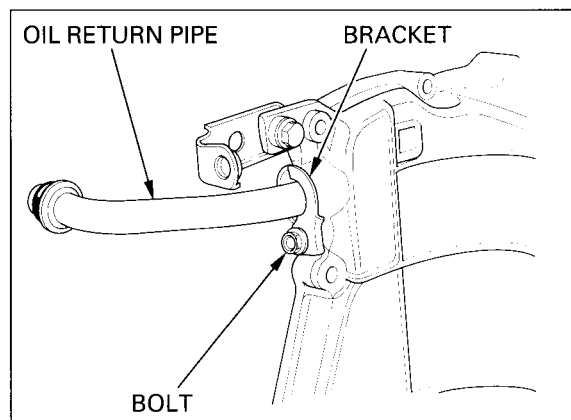

Remove the pressure relief valve and O-ring.



Remove the oil strainer and oil pipe set plate nut and plate.

