


Measure the voltage between the connector terminals of the wire harness side.

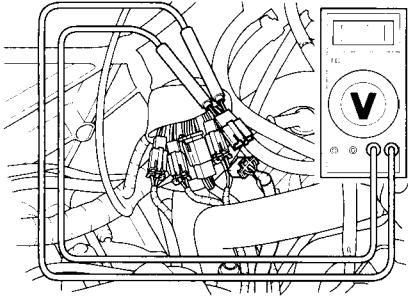


Connection: Black/Brown (+) – Green/Black (-)
Standard: 12 V

Out of range

- Open or short circuit in Green/Black wire

Voltage exists

Check for continuity of the Pink/Green wire between vehicle speed sensor connector and ECM connector.

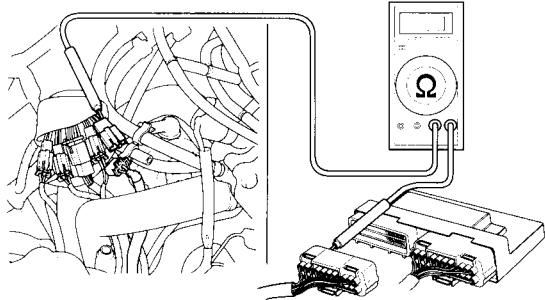

Standard: Continuity

No continuity

- Open or short circuit in Pink/Green wire

Continuity

- Replace the ECM with a new one, and inspect it again.