
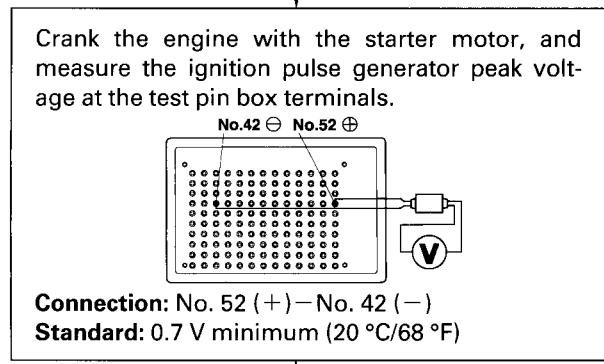



Out of range

- Faulty ignition pulse generator

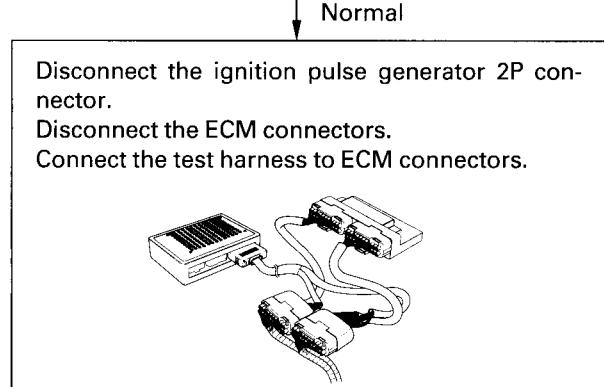


Out of range

- Open circuit in White/Yellow wire
- Open circuit in Yellow wire

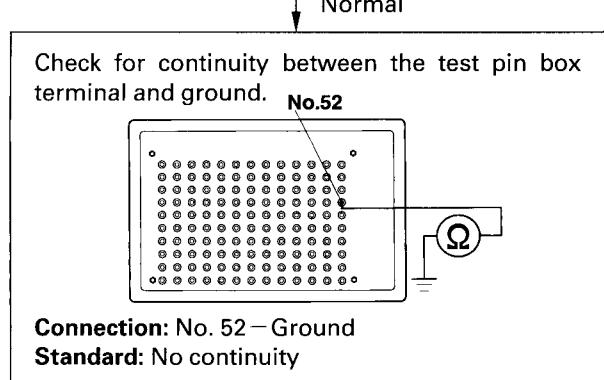

Continuity

 - Short circuit in Yellow wire



No continuity

- Replace the ECM with a new one, and inspect it again