

FUEL LINE INSPECTION

FUEL PRESSURE INSPECTION

▲WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions.*
- *Be sure to relieve fuel pressure while the engine is OFF.*
- *If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.*

CAUTION:

- *Before disconnecting fuel tubes, release the fuel pressure by loosening the service check bolt at the fuel tank.*
- *Always replace the sealing washer when the service check bolt is removed or loosened.*

Remove the seat (page 2-2).

Disconnect the battery negative cable from the battery terminal.

Remove the fuel tank mounting bolts.

Release the inner panel bosses from the fuel tank (page 3-5).

Lift the rear end of the fuel tank and support it using a equipped tools (rear axle wrench and extension) as shown.

Disconnect the pressure regulator vacuum tube and plug the vacuum tube.

