

INJECTOR

INSPECTION

▲WARNING

- *If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area.*
- *The exhaust contain poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.*

Start the engine and let it idle.
Confirm the injector operating sounds with a sounding rod or stethoscope.

If the injector does not operates, replace the injector.

REMOVAL

Remove the throttle body (page 5-59).

Disconnect the MAP sensor vacuum tube.
Remove the screw and MAP sensor.

Remove the nuts and fuel pipe assembly.

Remove the injectors from the throttle body.

