


Remove the wax unit link bracket screw.

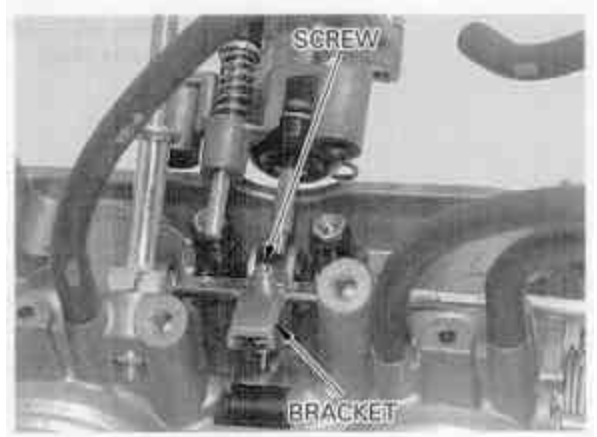

Remove the starter valve shaft, three collars and return spring.



ASSEMBLY

