


FUEL SYSTEM (Programmed Fuel Injection)

Install the three collars, return spring wax unit shaft bracket and starter valve shaft.




Install the starter valve assembly into the valve hole.

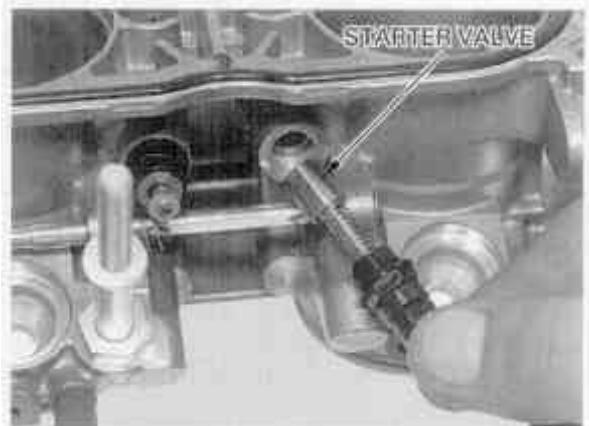

Tighten the starter valve lock nut to the specified torque.

TORQUE: 2 N·m (0.18 kgf·m , 1.3 lbf·ft)

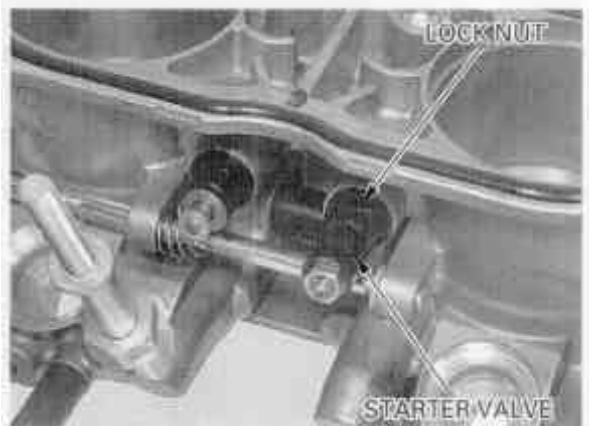

Install and tighten the wax unit link bracket screw to the specified torque.

TORQUE: 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

