



Install the fan motor onto the fan motor bracket and tighten the nuts.
Install the collar onto the fan motor shaft.

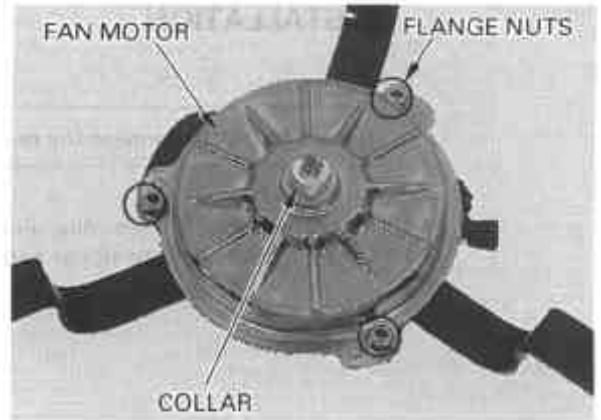


Install the cooling fan onto the fan motor shaft by aligning the flat surfaces.

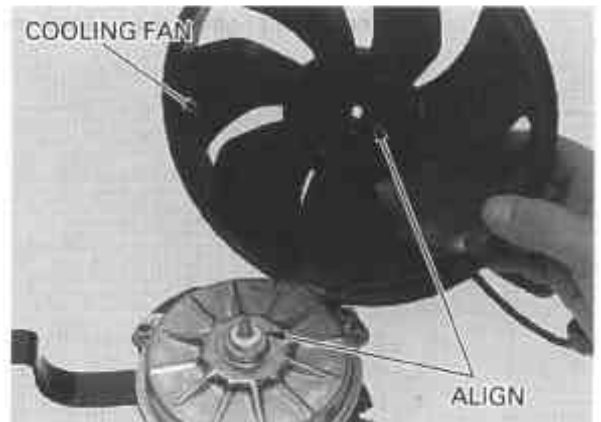

Apply a locking agent to the cooling fan nut threads.
Install and tighten the nut to the specified torque.

TORQUE: 2 N·m (0.25 kgf·m , 1.8 lbf·ft)

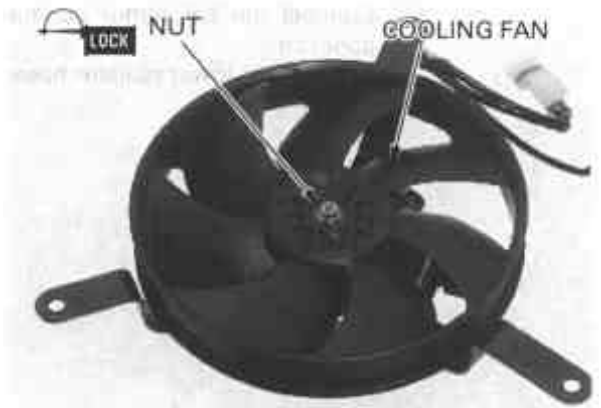

Install the fan motor/cooling fan assembly onto the radiator.
Route the fan motor switch cord and ground eyelet properly.
Install and tighten the bolts.

Connect the fan motor switch cord to the fan motor switch and clamp it as shown.

