



COOLING SYSTEM

Disconnect the water pump-to-water joint hose from the water pump body.

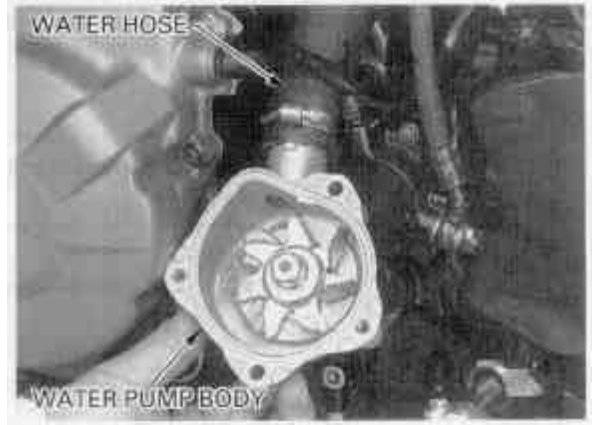

INSTALLATION

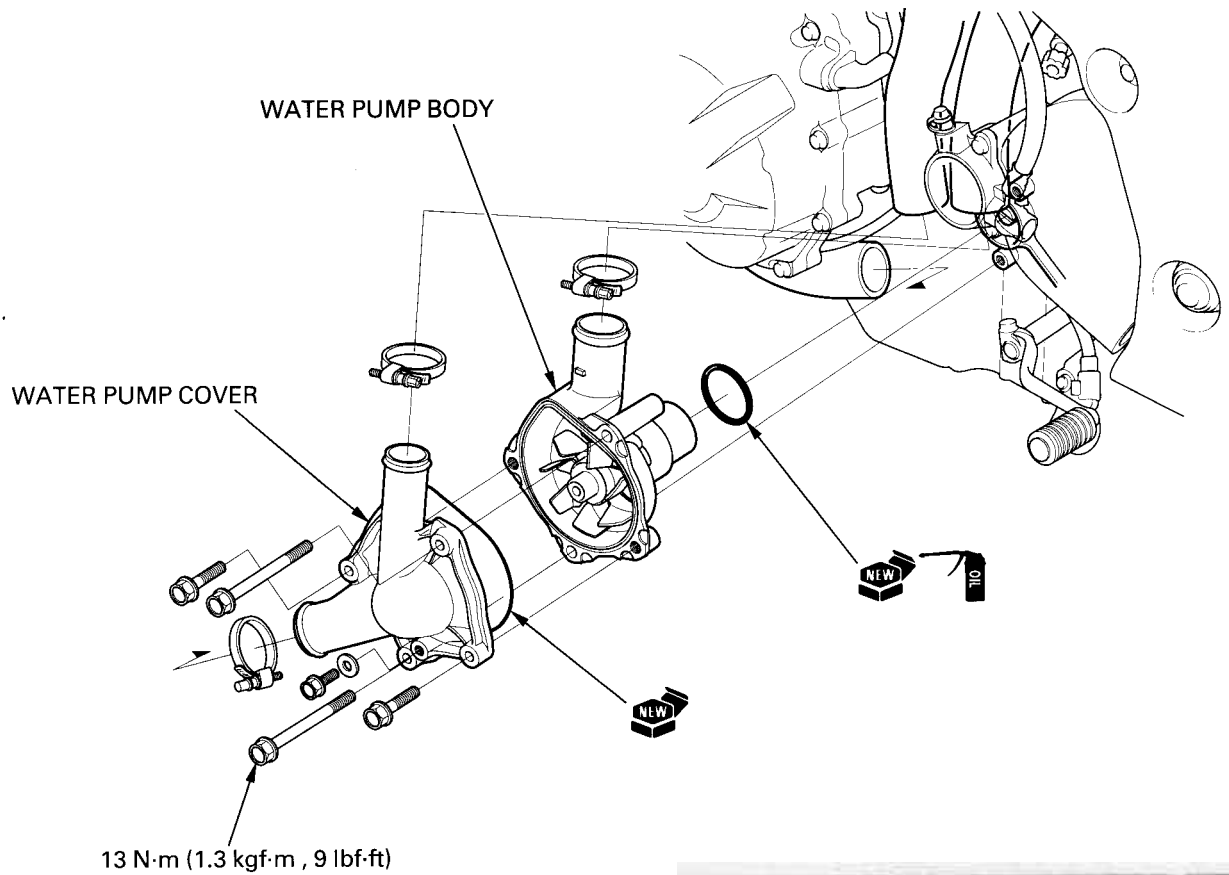

Connect the water pump-to-water joint hose to the water pump and tighten the clamp screw.

