


## REAR WHEEL/SUSPENSION

Tighten the swingarm pivot adjusting bolt with the pivot bolt.

**TORQUE:** 15 N·m (1.5 kgf·m , 11 lbf·ft)

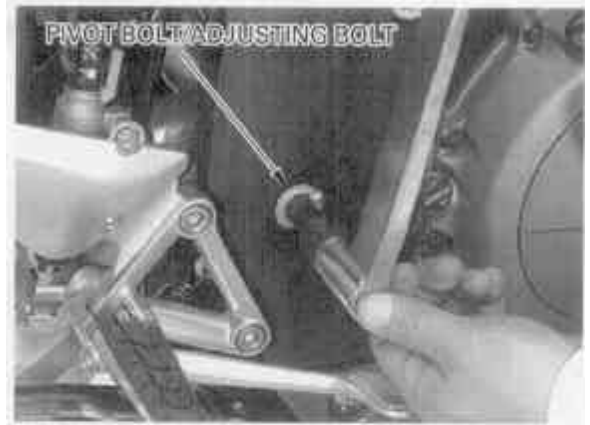

Install and tighten the swingarm pivot adjusting bolt lock nut fully by hand, then tighten the lock nut to the specified torque while holding the pivot bolt using the special tool.

**TOOL:**

**Pivot adjusting wrench**                      07908-4690003

**TORQUE:** 64 N·m (6.5 kgf·m , 47 lbf·ft)



Tighten the swingarm pivot nut to the specified torque.

**TORQUE:** 93 N·m (9.5 kgf·m , 69 lbf·ft)



Install and tighten the shock arm plate bolt/nut (swingarm side) and shock absorber lower mounting bolt/nut to the specified torque.

**TORQUE:** 42 N·m (4.3 kgf·m , 31 lbf·ft)

