


## BRAKE FLUID FILLING/AIR BLEEDING

## Lever brake line

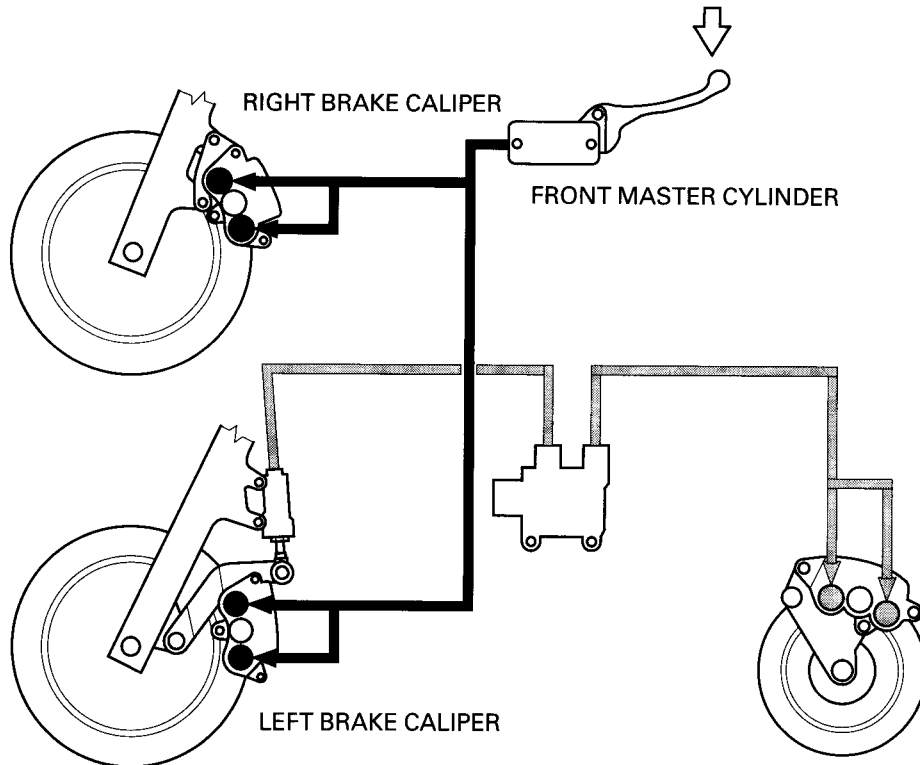


Fill the reservoir with DOT 4 brake fluid from a sealed container.

**CAUTION:**

- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. They are not compatible.

Operate the brake lever several times to bleed air from the master cylinder.

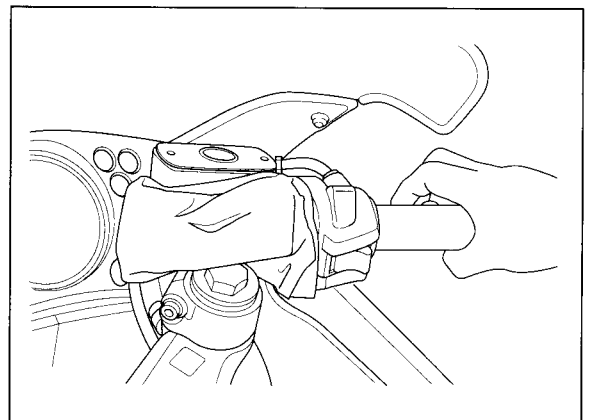

Connect a commercially available brake bleeder to the outer bleed valve.

Pump the brake bleeder and loosen the bleed valve, adding fluid when the fluid level in the master cylinder reservoir is low.

**NOTE:**

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

