



Remove the three mounting nuts and combination meter assembly.

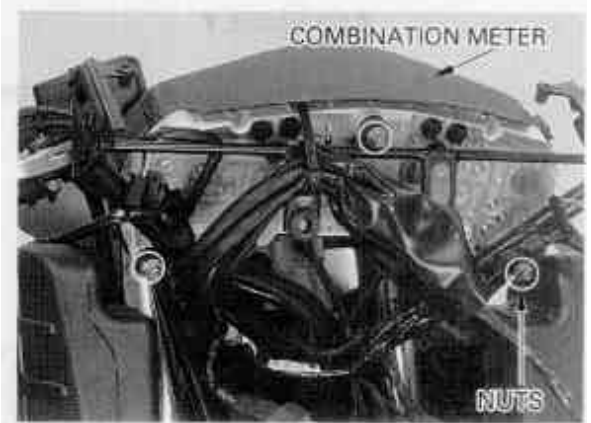


DISASSEMBLY

Remove the screws and front cover.

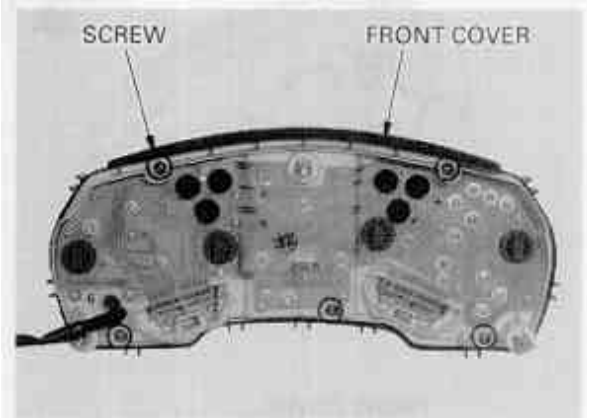

Remove the meter mounting screws.
Remove the harness hole plug.

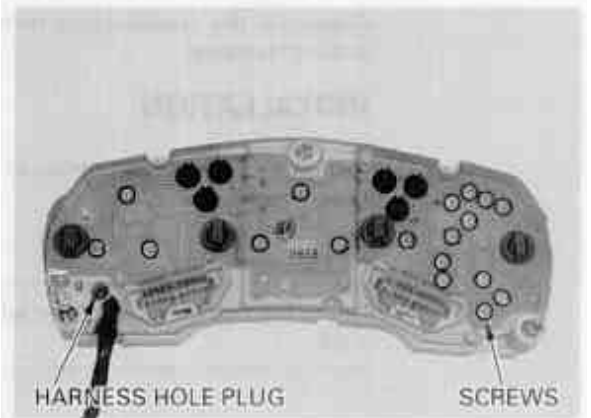

Remove the speedometer, tachometer, fuel level gauge/coolant temperature meter and clock unit.

