

TROUBLESHOOTING

NOTE:

The immobilizer indicator comes on for approx. two seconds then it goes off, when the ignition switch is turned ON with the properly registered key and the immobilizer system functions normally. If there is any problem or the properly registered key is not used, the indicator will remain on.

Immobilizer indicator does not come on when the ignition switch is turned ON

- Check for a blown fuses (10 A).

