

POOR PERFORMANCE AT LOW AND IDLE SPEED

Possible cause 1. Check ignition timing ——————————Incorrect — Improper ignition timing Correct ➤ • See section 5 2. Check the starter valve synchroniza- Incorrect tion Correct — Abnormal — ► • Faulty pressure regulator (Section 5) 3. Inspect the fuel flow — Normal 4. Inspect the fuel injector — Abnormal — ➤ • See section 5 Normal 5. Check for leaks in the intake pipe Leaking — Loose insulator clamp Damaged insulator Not leak 6. Perform spark test -— Weak or intermittent — → • Faulty spark plug spark • Faulty carbon or wet fouled spark plug Faulty ECM Faulty ignition coil • Broken or shorted spark plug wire • Faulty engine stop switch • Faulty ignition pulse generator Faulty ignition switch Good spark · Loose or disconnected ignition system wires