


FUEL SYSTEM

Remove the pilot screw, spring, washer and O-ring.

Check each jet for wear or damage.
Check the pilot screw for wear or damage.

Clean the jets with cleaning solvent and blow open with compressed air.

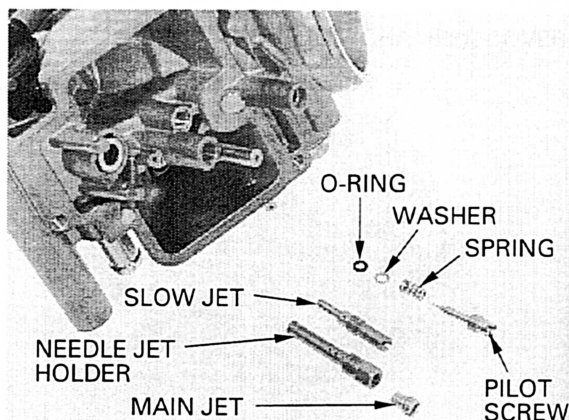

CARBURETOR CLEANING


Remove the following:

- air cut-off valve
- diaphragm/vacuum piston
- main jet, needle jet holder and slow jet
- pilot screw

CAUTION:

Cleaning the air and fuel passages with a piece of wire will damage the carburetor body.

Blow open all air and fuel passages in the carburetor body with compressed air.

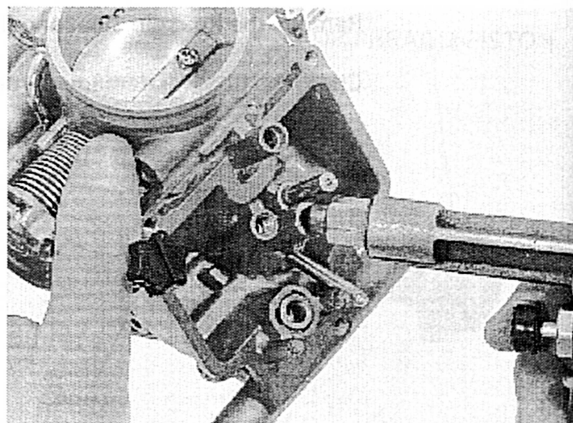

CARBURETOR ASSEMBLY

