


## COOLING SYSTEM

Fill the system with recommended coolant up to the filler neck with the motorcycle on its side stand.


Bleed air from the system as follows:

1. Shift the transmission into neutral.  
Start the engine and let it idle for 2–3 minutes.
2. Snap the throttle 3–4 times to bleed air from the system.
3. Stop the engine and add coolant up to the filler neck.
4. Install the radiator cap.

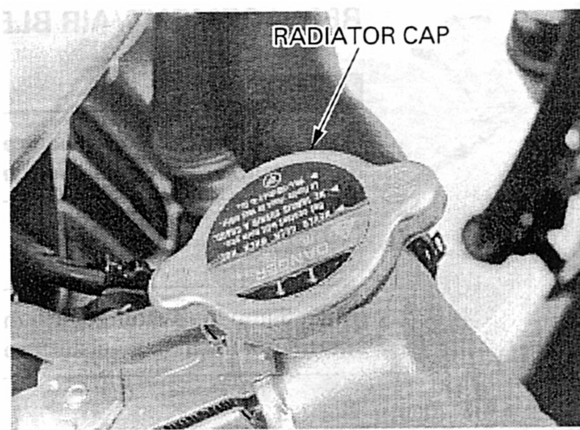

Fill the reserve tank to the upper level line with the motorcycle upright on a flat, level surface.

Install the front fairing (page 2-3).

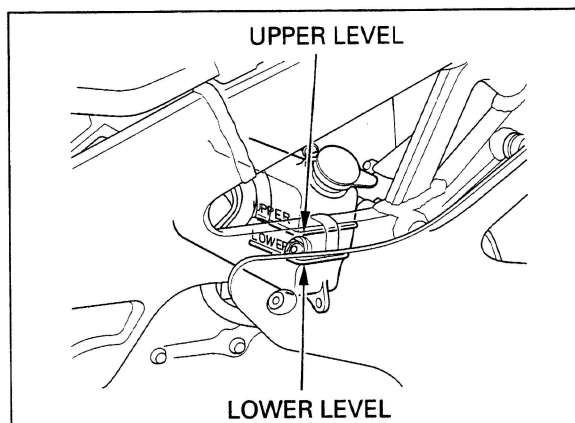

## RADIATOR/COOLING FAN

### CAUTION:

*Be careful not to damage the radiator fins while servicing the radiator.*

### RADIATOR REMOVAL/INSTALLATION

Drain the coolant from the system (page 6-5).

#### RIGHT RADIATOR

Disconnect the fan motor 2P (black) connector.  
Disconnect the radiator siphon tube and upper radiator joint hose.  
Remove the two mounting bolts and the radiator from the mounting stay.  
Disconnect the lower radiator hose from the radiator.

Install the right radiator in the reverse order of removal.

Fill and bleed the cooling system (page 6-5).

