


Install a new slider bushing if it has been removed.

**CAUTION:**

- *Be careful not to damage the coating of the bushing.*
- *Do not open the bushing more than necessary.*


**NOTE:**

Remove the burrs from the bushing mating surface, being careful not to peel off the coating.

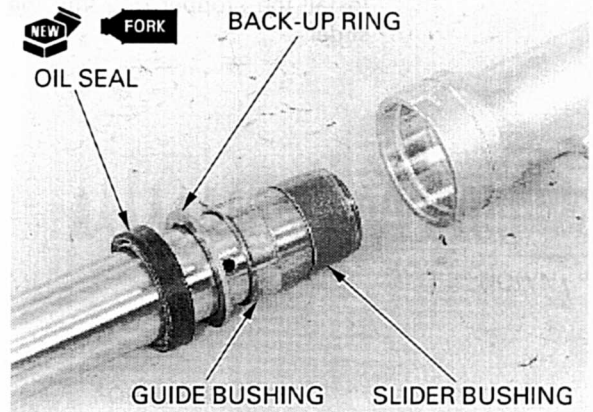

Install the guide bushing and back-up ring.  
Apply fork fluid to a new oil seal lip.  
Install the oil seal with the marking side facing up.  
Install the fork tube into the fork slider.

Install the rebound spring and oil lock piece onto the damper piston.  
Install the fork damper into the fork tube.

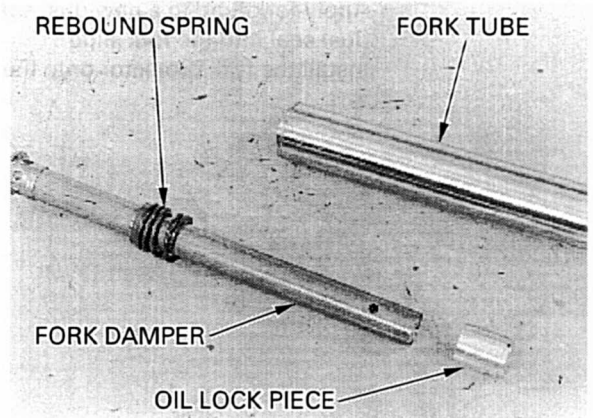


Hold the fork slider in a vise with a soft jaws or shop towel.  
Apply locking agent to the socket bolt threads.  
Install the socket bolt with a new sealing washer and tighten it.

**TORQUE:** 20 N·m (2.0 kgf·m , 14 lbf·ft)

**NOTE:**

If the fork damper turns together with the socket bolt, temporarily install the fork spring, spring collar and spring seat.

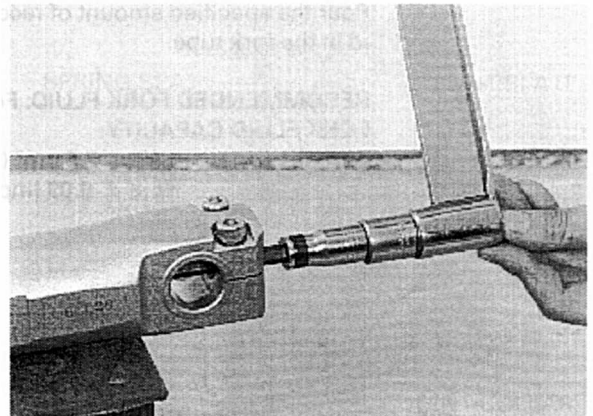

Drive the oil seal into the fork slider until the stopper ring groove is visible, using the special tool.

**TOOLS:**

- |                                |               |
|--------------------------------|---------------|
| <b>Fork seal driver weight</b> | 07947-KA50100 |
| <b>Fork seal driver</b>        | 07947-KF00100 |

