


FRONT WHEEL/SUSPENSION/STEERING

Install the front brake hose 3-way joint and clamp, and tighten the bolts.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the forks (page 13-20).

Install the front fairing (page 2-3).

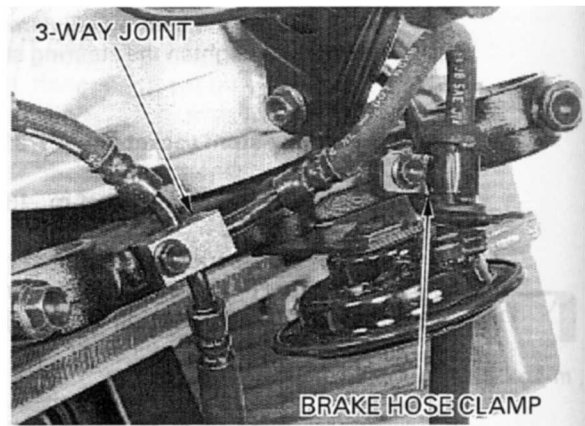

STEERING BEARING PRELOAD

Remove the front fairing (page 2-3).

Support the motorcycle securely using safety stands or a hoist and raise the front wheel off the ground.

Position the steering stem to the straight ahead position.

Hook a spring scale to the fork tube between the fork top and bottom bridges.

Make sure that there is no cable, wire harness or hose interference.

Pull the spring scale keeping it right angle to the steering stem.

Read the scale at the point where the steering stem just starts to move.

STEERING BEARING PRELOAD:

1.0–1.6 kgf (2.2–3.5 lbf)

If the readings do not fall within the limits, readjust the steering bearing adjustment.

Install the front fairing (page 2-3).

