


Assemble the caliper body halves.
 Apply locking agent to the caliper assembly bolt threads.
 Install and tighten the assembly bolts.

TORQUE: 32 N·m (3.3 kgf·m , 24 lbf·ft)

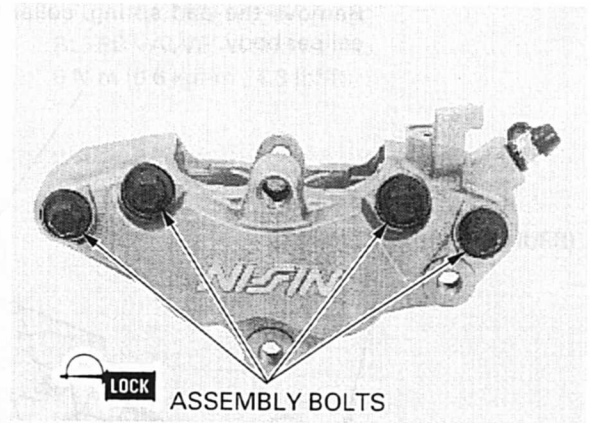


Install the brake pads (page 15-5).

Connect the brake hose to the brake caliper with the oil bolt and new sealing washers, and tighten the oil bolt.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill and bleed the front brake hydraulic system (page 14-3).

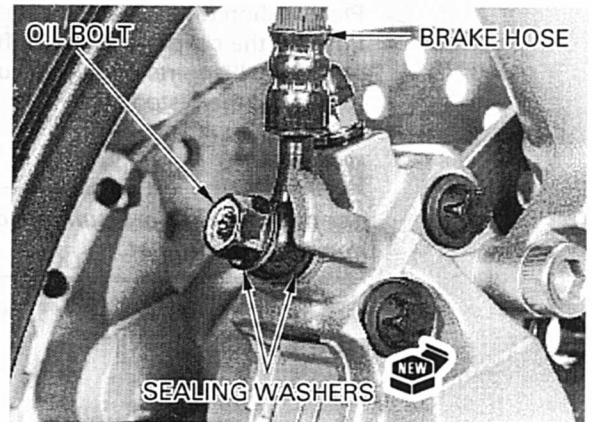

REAR BRAKE CALIPER

CAUTION:

Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

DISASSEMBLY

Drain the brake fluid from the rear brake hydraulic system (page 15-3).

Disconnect the brake hose from the rear brake caliper by removing the oil bolt and sealing washers.

Remove the rear brake pads (page 15-6).

Remove the rear brake caliper from the bracket.

