


CLUTCH DIODE

INSPECTION

Remove the seat (page 2-2).

Remove the fuse box cover and clutch diode.

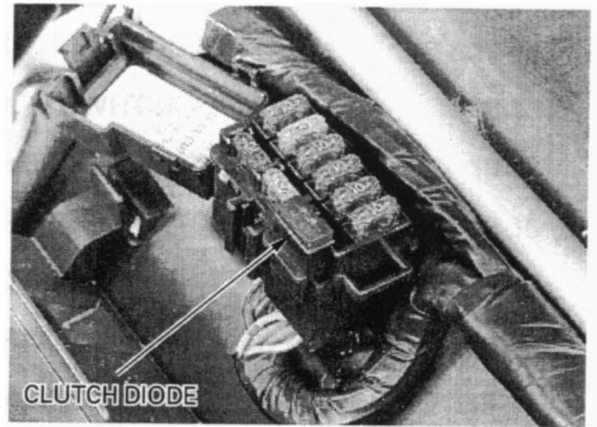

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.

If there is continuity in one direction, the diode is normal.

