


STARTING THE ENGINE

1. Turn the fuel valve to ON.
2. Insert the key in the ignition switch and turn to ON.
3. Shift the transmission into neutral. The neutral indicator (green) should go on.
4. Raise the choke lever (1) to full closed position (A), if the engine is cold.
Pull the knob (2) out when traveling at altitude above 6,000 feet.
Below 6,000 feet, push the knob in.

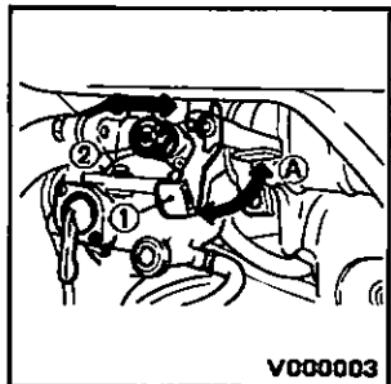

V000003

ARRANQUE DEL MOTOR

1. Pase la válvula del combustible a la posición ON.
2. Introduzca la llave del interruptor de ignición y pásela a la posición ON.
3. Pase la transmisión al engranaje neutro. Deberá encenderse el indicador de neutro (verde).
4. Levante la palanquita del estrangulador (1) a la posición de cierre (A), si el motor está frío.
Tire del mando (2) cuando conduce a altitudes superiores a los 1.830 metros (6,000 pies). Empújelo por completo a altitudes inferiores.