


Air Cleaner Servicing

Remove the wing nut (1) and air cleaner tube clamp screw (2), then remove the air cleaner tube and cover. Unscrew the mounting plate bolt (3) and remove the mounting plate (4).

Pull out the air cleaner element (5) in clean stoddard solvent and allow to dry thoroughly.

Soak air cleaner element in clean gear oil (SAE80- SAE90) until saturated then squeeze out excess oil.

WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean air filter elements.

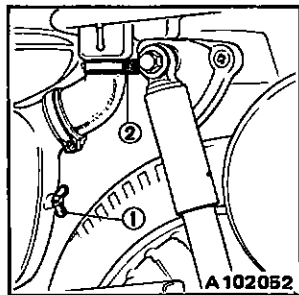

Limpeza del filtro del aire

Retire la tuerca de aletas (1) y el tornillo de sujeción (2) del tubo del filtro del aire, retire el tubo y la cubierta. Destornille el perno (3) de la placa de montaje y retire ésta (4).

Extraiga el elemento (5) del filtro del aire.

Lave el elemento de filtro en un líquido de detergente estándar y déjelo secar por completo.

Bañe el elemento del filtro de aire en el aceite de engranajes limpio (SAE80 - SAE90) hasta que quede bien saturado y sacuda el aceite en exceso.

PRECAUCION: La gasolina y agentes de bajo punto de inflamación son altamente inflamables y no deberán usarse para limpiar el elemento del filtro de aire.

